


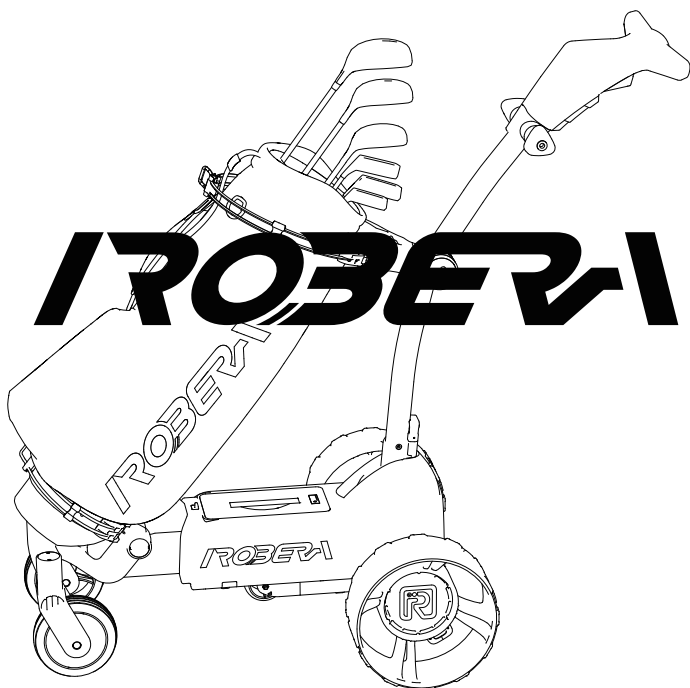

ROBERA

ROBERA PRO

Smart Electric Golf Cart

ROBERA USA

ROBERA GLOBAL

support@roberashop.com

FOLLOW US

<https://www.facebook.com/Roberashop/>



INSTRUCTIONS

and Important Safety Information

Thank you for purchasing the
ROBERA Golf Caddy.To get the most
out of your cart please follow
these quick steps before use.

- 1.Your Robera series has a 24 month manufacturer warranty from the date of purchase against faulty material or workmanship which includes the battery and charger.
- 2.This warranty is void if the charger is damaged due to misuse or overheating from inadequate conditions during charging.
- 3.IMPORTANT: Register your serial number online to validate your warranty.
Visit (<https://roberashop.com/pages/product-registration>) to register.

ROBERA USA
ROBERA GLOBAL
support@roberashop.com
FOLLOW US
<https://www.facebook.com/Roberashop/>

CONTENTS

1.0	Registration	03
2.0	What's included	04
3.0	Assembling the robera series	05
4.0	Battery charging & Connection	09
5.0	Operating instructions	10
6.0	Function & Operating	14
7.0	Warranty	19
8.0	Maintenance	21



1.0 REGISTRATION

1. It is most important you register your ROBREA Pro online immediately as registration
 - Records your ROBREA for warranty purposes
 - Speeds up any servicing required on your ROBREA
 - Assist us to contact you with any updates to your ROBREA
2. To register your ROBREA Pro, visit (<https://roberashop.com/pages/product-registration>)
3. You will need to record your ROBREA serial number. This is found on the ROBREA battery base or in the top box compartment.
4. Please keep this user manual on file for your own reference and a copy of your serial number.

My ROBERA Serial Number is

(example GA24B0020)

Response	Percentage
Yes, the U.S. should take action to address climate change	95%
No, the U.S. should not take action to address climate change	5%

Purchased Date

You may be required to show proof of purchase so we recommend you keep your receipt with this manual.

2.0 WHAT'S INCLUDED

- 1 Type-C
- 2 Charger
- 3 Golf Cart
- 4 Instructions
- 5 Remote Control



3.0 ASSEMBLING THE ROBERA SERIES



3.1 Assembling & Unfolding(Video Linking)

1. Install the two large wheels: partially insert each wheel, then pull up the buckle and push it in completely.
2. Slide the buckle to unfold the auxiliary wheels.
3. Unlock the strap buckle and slide the front buckle to open the folding hook.
4. Unfold the upper part for automatic locking.
5. Pull up the bolt and unfold the front wheel.



Install the two large wheels,pull up the buckle and push it in completely.



Slide the buckle to unfold the auxiliary wheels.



Unlock the strap buckle and slide the front buckle to open the folding hook.



Unfold the upper part for automatic locking.



Pull up the bolt and unfold the front wheel.

3.2 Folding & Storage

1. Pull up the bolt to fold the front wheel; it will lock automatically once in place.
2. Hold the upper column and pull up the bolt to fold the upper and lower columns.
3. Attach the bag holder to the hook on the front wheel seat and secure the strap buckle; the cart is now portable with one hand.
4. For compact storage, remove the rear wheel and fold the auxiliary wheels. Refer to the rear wheel installation steps as needed.



Pull up the bolt and fold the front wheel.



Hold the upper column part and pull up the bolt.



Attach the bag holder to the hook on the front wheel seat and secure the strap buckle; the cart is now portable with one hand.



For compact storage, remove the rear wheel and fold the auxiliary wheels. Refer to the rear wheel installation steps as needed.

3.3 Fifth Foldable Rear Wheel

1.The ROBERA comes standard with a fifth foldable rear wheel. This wheel **MUST** be unfolded into position at all times when the ROBERA is in use. This will reduce damage to ROBERA, and provide ultimate stability across all terrains. This fifth wheel should be cleaned regularly with a cloth to ensure it can be folded as required for storage.



3.4 Fitting the Golf Bag

1.Ensure that the top bag support straps are disconnected.

2.Position the golf bag on the ROBERA golf cart.

3.Secure the top bag support strap.

- Select a good position for the elasticised straps to be put around the golf bag
- Stretch the longer end of the strap and loop the rounded plastic bar underneath the hook on the shorter end
- The top bag support straps should now be connected.

4.Please ensure the top bag support straps are hooked in place securely before releasing. Failure to do so could result in injury to the user.

- The rounded plastic bar on the longer strap can be adjusted to ensure the bag is secured properly in place.
- Secure the lower bag strap
- Pull the lower bag strap over the base of the golf bag

4.0 BATTERY CHARGING & CONNECTION


- 1.The ROBERA is designed to take
 - ROBERA 22.2V/13.5Ah (299.7Wh) Lithium battery (Standard)

4.1 Initial Charge

- 1.Before using your ROBERA for the first time or after each use, you must fully charge the battery.
- 2.Fluctuate the Buckled Lock and lift the handle to take out the lithium battery package.
- 3.Plug the charger's AC connector into an outlet, making sure it's properly inserted.



- 4.Plug the charger's DC connector into the charging port of the battery and ensure that the plug is in position.

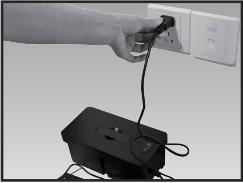

- 5.Plug the charger output connection into the connector on the front of the battery – the red light illuminates to indicate charging.
- 6.When the charging light indicator has turned green, the battery is fully charged and ready to be used.

4.2 Connecting the Battery onto the ROBERA series

- 1.Position the battery on the ROBERA series and fluctuate the Buckled Lock then push the battery down to secure it.



2. Please refer to the battery charger user manual for further information.

5.0 OPERATING INSTRUCTIONS



5.1 Powering On

- 1.Press and Hold the Blue Round "Stop" Button for 2 Seconds.
 - To start the golf cart, simply press and hold the "Stop" button (in the middle) for 2 seconds.
 - Once the cart is started, it will automatically enter standby mode, awaiting further user actions.
- 2.Speed Control Mode Available Immediately After Powering On.
 - Once powered on, the golf cart automatically enters speed control (cruise control) mode, allowing you to set and adjust the speed from H0 to H9.
 - At H0, you can push Robera effortlessly. From H1 to H9, Robera can move freely at different speeds you set, and you won't need to use your hands to push it.
 - Please ensure the surrounding area is safe and free of obstacles during the startup and operation of the cart.

3.Wait for the AI Component to Load Before Activating Follow Mode

- After powering on, the golf cart will take approximately 40 seconds to load the AI component. During this time, features such as auto-following, marching, and voice broadcasting will be temporarily unavailable.
- You will see the Robera icon flashing on the LCD screen during loading. Once the loading is complete and the icon stops flashing, the AI component will be ready, and the follow function can be used normally.

5.2 Powering Off

- 1.Turn off the golf cart Robera, press and hold the Blue Round "Stop " Button for more than 2 seconds.
- 2.After powering off, ensure that the golf cart has completely stopped in order to avoid accidental restarts.

5.3 Parking Mode

- 1.In case of an emergency or the need to temporarily stop the golf cart, simply press the middle Stop button to enter parking mode.
- 2.To switch between different modes, Marching or Follow, simply press the right or left blue button. Then, turn the knob to adjust the speed and enter speed mode at your desired setting.
- 3.To resume normal operation, simply restart or operate the device as needed.

5.41 Remote Control

1. Before using the remote control, unlock it by pressing and holding it for 1 second. The remote will vibrate for 0.5 seconds, indicating that it has been successfully unlocked.
2. A red light will indicate that the system is in a locked state. When the remote is locked, pressing any button will not produce a response.
3. When the remote is unlocked, pressing any button will activate a green light, allowing you to use the remote control.
4. After 5 minutes of inactivity, the remote will automatically lock and enter low-power mode.

5.42 Forward Key

1. Press the forward key once, and the Robera will move forward at a fixed speed.
- 2.If you hold down the forward key, the speed will gradually increase.
- 3.When you release the forward button, the cart will keep moving at its current speed.

5.43 Backward Key

- 1.Press once to reduce the current speed by a fixed amount.
- 2.If the cart is moving forward, holding the backward key for over 0.5 seconds will bring the speed to zero.
- 3.When at a speed of zero, holding the key will engage reverse mode, which moves the cart at a fixed speed until the key is released.

5.44 Left and Right Keys

Direction Control: Press the left and right keys to control the golf cart's left and right turns.

1. Follow Key: To activate Follow Mode, press and hold the follow key for 1 second to activate the follow function. The golf cart will follow the first recognized person in front of it within a distance of 5 meter. Within 15m, it will enter one-key recall mode and automatically rotate to find and return to you; beyond 15m, it will keep rotating if it can't recognize the target.
- 2.Marching Mode: Press and hold for 1 second to start marching. The golf cart will lock onto the target directly in front of the camera.
- 3.Stop Key: Press the stop key to immediately halt the golf cart's movement

5.45 Light Indicator

- 1.A green light indicates that ROBERA is in normal working condition.
- 2.A red light indicates that ROBERA is in a locked state and needs to be unlocked before operation.
- 3.Low Battery Indicator: When the remote control battery is low and any button is pressed, a red light will flash, signaling that it needs to be charged.
- 4.To charge the battery, simply pull the battery unlock clip and lift the battery out for charging.

- 5.Charging Indicator: While the remote control is charging, a red light will flash, indicating that it is in the charging process.
- 6.Full Charge Indicator: When connected to the charger and the battery is fully charged, a steady green light will indicate that charging is complete.

5.46 Remote Control Replacement

The factory–default remote control is pre–paired, so no user pairing is necessary. The following steps are only required if you are purchasing a new remote control.

- 1. Pairing the Remote Control & Entering Pairing Mode.
 - For the Remote Control: Press and hold the unlock button and the STOP button for 3 seconds. The remote will vibrate for 0.5 seconds, and a blue light will flash, indicating that it has entered pairing mode. If pairing is not completed within 30 seconds, the remote will automatically exit pairing mode. You can also exit pairing mode immediately by pressing any button.
 - For ROBERA: Within 3 seconds of powering on ROBERA, simultaneously press and hold the left and right buttons on the panel for 1 second. ROBERA will enter pairing mode, and the remote control icon on the LCD screen will flash, indicating that it is ready to pair.
- 2. Pairing Status Indicators.
 - If pairing is successful, the remote will display a green light for 1 second, notifying the user that the pairing is complete. Meanwhile, the remote control icon on the golf cart's screen will remain lit.
 - If pairing fails, the remote will display a red light for 1 second. If pairing is not completed within 1 minute, the golf cart will automatically exit pairing mode.

3.Remote Following Calibration.

- Calibration is necessary between the remote and the ROBERA golf cart. After each pairing of the remote control, a Remote following calibration must be performed. Please follow these steps to carry out the Remote Following Calibration.
- Distance Requirement: Keep the remote 1 meter in front of Robera. from the Robera, ensuring there are no obstructions between them.

- Start Calibration: Press and hold the lock and unlock buttons at the same time for 3 seconds. When the white light turns on, calibration has started.
- Completion: Wait for about 30 seconds. The white light will turn off, indicating that the calibration was successful.

6.0 FUNCTION & OPERATION

Dashboard:



Battery Level Display Icon: Each of the 5 squares represents 20% battery capacity; full indicates 100%.



Mute Icon: The constantly lit icon indicates the device is in mute mode.



Remote Control Connection Icon: Constantly lit icon indicates normal remote control connection.The blinking icon indicates the remote control is in pairing mode.



USB Upgrade Icon: Lit icon indicates successful recognition of USB upgrade peripheral.



Digital Dial Icon: In stationary state, displays the total mileage since last boot. In motion, displays the current speed of the vehicle.



Follow Mode Icon: The Lit icon indicates Follow Mode is active.



Marching Mode Icon: The Lit icon indicates Motion Sensing Mode is active.



Speed Control Mode Icon: The lit icon indicates Cruise Control Mode is active.



Parking Mode Icon: The lit icon indicates Parking Mode is active. The blinking icon indicates Emergency Stop Mode is active.



6.1 Speed Control Mode

Operating Instructions:

- 1. Activation: Rotate the Multi-function Key counterclockwise to any position to switch to Assist Mode. In this mode, pushing the cart is effortless and convenient.
- 2. In non-powered mode, rotate clockwise to increase speed, and counterclockwise to decrease speed.
- 3. Stop Running: Press the knob button to stop immediately.
- 4. Special Usage Scenario Note: Be cautious when operating on sloped roads as the vehicle may roll automatically due to gravity.

6.2 Follow Mode

Operating Instructions.

- 1. Activate Follow Mode: Press the Follow Key/Motion Key on the golf cart or remote control. When a person is within 0.5 meters in front of the camera, it will automatically lock on and start following/motion sensing.
- 2. Gesture Activation (in case of recognition failure): If the camera fails to recognize a person, you can open your palm with fingers pointing downwards, make a gesture towards the camera to activate follow mode.
- 3. Stop Following: You can stop ROBERA by placing your palm in front of the camera. Additionally, if you move within 30 cm of the cart, it will automatically cease following you.

6.3 Marching Mode

Operating Instructions.

- 1. Activate Follow Mode: Press the blue marching button on Robera golf cart or marching button remote control. When a person is within 0.5 meters in front of the camera, it will automatically recognize him and reverse follow him.
- 2. Gesture Activation (in case of recognition failure): If the camera fails to recognize a person, you can open your palm with fingers pointing downwards, make a gesture towards the camera to activate follow mode.
- 3. Stop Following: You can stop ROBERA by placing your palm in front of the camera.
- 4. Exit Mode: Press any blue button on ROBERA golf cart or the stop button on the remote control to exit the mode.

6.4 Parking Mode

6.4.1 Activation.

- 1. Button Trigger: Pressing the multi-function button in any mode activates Parking Mode.
- 2. Status Indication: In Parking Mode, the P indicator light will remain illuminated, indicating that the vehicle is in a parked state.
- 3. Remote Control Operation: In Parking Mode, the golf cart can be operated using the remote control.

6.5 Emergency Stop Mode

6.5.1 Activation.

- 1.Button Trigger: Press any key during automatic operation to stop immediately.
- 2.Abnormal Fall Detection: Automatically halts in case of abnormal falls.
- 3.Status Indication: In Emergency Stop Mode, the P indicator light flashes, indicating the vehicle is in an emergency stop state.

6.5.2 Deactivation.

- 1.Deactivation Method: Press the multi-function button to deactivate and switch to Parking Mode.
- 2.Safety Lockout: Mode switching is disabled during an emergency stop to ensure safety.
- 3.Remote Control disablement: Remote control is disabled during an emergency stop to prevent external interference.

6.6 Hand Gesture Recognition Instructions

- 1.Positioning: Position your palm directly toward the camera with your fingers naturally and slightly spread. Hold this gesture for about 0.5 seconds to trigger the start or stop function.
- 2.Effective Distance: The effective distance for gesture recognition is 0.2 meters to 2 meters. Please note that the actual recognition distance may vary due to environmental factors.
- 3.Gesture Placement: Ensure that the gesture is performed between the camera and you. Do not execute gestures from the side or from behind your body. The correct gesture is one where the camera sees your hand with your body as the background.
- 4.If Recognition Fails, the gesture is not recognized during execution, remove your hand and then repeat the gesture. Holding the gesture for an extended period will not improve recognition accuracy.

6.7 Notes

- 1.Charging: The ROBERA golf cart can charge devices that require 5V power, such as smartphones, tablets, and smartwatches, via Type-C and USB ports. To ensure safety, the output power for each port is limited to 4W. When connecting, make sure that the USB or Type-C charger meets standards, and that the battery and charging ports are undamaged. Once connected, ROBERA will automatically supply power or charge the device without any additional action needed. You can check the charging status through the external device's charging indicator or screen.
- 2.Remote Control: If the remote control is not used for an extended period, please charge it every 3 months to maintain battery life and performance. Charging times may vary depending on the battery level and power source, so be sure to monitor the indicator light while charging.
- 3.Moving Uphill and Downhill: Always stay within the camera's range. When in follow mode, be sure to pause your steps appropriately while going uphill to remain in view. It is not recommended to use follow mode on steep slopes when the slope exceeds 15°, as this could cause the cart to tip over. Instead, use push mode for added safety.
- 4.Sun Glare: When walking in direct sunlight, the cart may be affected by glare. In such cases, the cart will stop. To prevent this, it is advisable to avoid direct sunlight on the camera lens.
- 5.Open Spaces: The ROBERA caddy is designed for use in open spaces. Avoid operating it in enclosed areas. Radio frequency signals, Wi-Fi, or similar electronic signals may interfere and cause the ROBERA caddy to function improperly or become unstable. Avoid blocking the camera with your hands or other objects.
- 6.Parking Lots: In parking lots, please use push mode. Cars or other obstacles may cause signal reflection and interfere with communication.
- 7.Obstacles: Be aware of surrounding obstacles and how they may affect ultrasonic signals. Move slowly near obstacles (including pools, sand traps, and other barriers) and exercise caution

- 8.Signal Interference: If you experience signal interference in remote control mode in these areas, please switch to push mode or follow mode.
- High-voltage cables.
 - Base stations.
 - Areas near airports or military bases.
 - Wi-Fi or similar electronic signals.

9.Humid Environments: Do not use ROBERA in humid conditions. If it rains, please turn off the ROBERA and move it to a dry, safe place.

6.8 Other Reminders

- 1.Robera golf carts are for golf course use only.
- 2.Reduce speed while turning: The camera may struggle to locate the user during turns, which could affect the cart's direction. Pay special attention to the terrain.
- 3.In narrow passages (like bridges or hallways), control your speed and ensure that other people do not enter the follow zone to prevent the cart from entering dangerous areas.
- 4.Do not exceed the weight limit: The maximum load for the cart is approximately 15 kilograms. Overloading can reduce the vehicle's lifespan and may cause malfunctions.
- 5.If you are not familiar with the operation, it's advisable to keep the remote control nearby, as you can use it to stop the cart in case of an emergency.
- 6.In auto mode, please avoid hanging heavy items near the handle to prevent the ROBERA from becoming unbalanced and tipping over.

7.0 WARRANTY

7.1 Warranty Policy

1.The ROBERA series are covered by a limited 2 years manufacturer's warranty from the date of purchase. Duration of this warranty is:

- Golf Cart Body, Battery, and Charger: 2-year warranty.
- Accessories: 1-year warranty.
- Refurbished Caddy: 1-year warranty.

2.ROBERA or an authorised service centre wil repair or replace anyparts found to be defective in materials or workmanship under normal use provided that:

- The ROBERA has been properly used, maintained and regularly serviced.(see section 10.5)
- The replacement or repair is performed by an authorised ROBERA service centre or the owner with Robera approval.
- The ROBERA has been registered online.

7.2 Warrant Exclusions

1.The following events will void the warranty:

- Any alteration performed by non-authorized people or companies.
- Fitting of parts or accessories not recommended by Robera.
- Any damage caused by continued operation of the product after it is known to be defective.
- Damage to the seat and/or seat support bracket on the unit.
- Damage caused by partial or complete ingress of water into the motor/gearbox and other major components.
- Damage caused by the unit being driven into bunkers, other course hazards, or clubhouse and carpark hazards.
- Damage caused by golf balls or golf clubs.
- Application of external force to any part of the unit or battery.
- Fusion of motor or electronics through overload or continual stationary operation.
- All implied warranties [save those preserved by statute] are excluded. Liability for consequential damages under any and all warranties is excluded to the extent exclusion is permitted by law.

2.The following events are not covered under warranty:

- Normal wear and tear (e.g., tires, rubber handlebar, elastic straps, paintwork, battery performance, axle threads, charging ports on batteries and remotes, screen glass, etc.).
- Minor appearance defects that do not affect the operation of the unit and are considered by the manufacturer to be within accepted standards.

7.3 Parts installed During Warranty

- 1.Warranty coverage for components installed during a unit's warranty period will last for the duration of the model's warranty period, provided the warranty installation is performed by ROBERA, an authorized service center, or the owner with approval.

8.0 MAINTENANCE

8.1 Cleaning Your ROBERA Golf Caddy (See Maintenance Schedule)

- 1.For years of good operation, your ROBERA golf caddy requires care and attention.
- 2.Keep your ROBERA golf caddy clean by using a cloth with warm water and mild detergent.
- 3.Do not hose down your ROBERA golf caddy under any circumstance, as the ROBERA golf caddy has electronic components.
- 4.Ensure that the seat stem bracket is free from sand.
- 5.Do not submerge your ROBERA golf caddy in water as it will cause irreparable damage.
- 6.Clean the ROBERA battery base when the battery is remove from the ROBERA golf caddy.

8.2 Service and Repair Centres

- 1.For all servicing, please do not go back to your place of purchase.
- 2.To find your nearest Service centre visit www.roberashop.com
- 3.For warranty repairs to be authorised, you MUST provide proof of purchase, Please keep this with you as well as your Serial number. You can record in this manual. It is most important you register your ROBERA golf caddy online for warranty purposes.

8.3 Purchasing Parts and Accessories

- 1.You are welcome to service your ROBERA series out of warranty by purchasing parts directly from ROBERA. Please call or email support@roberashop.com to discuss the appropriate parts and instructions.
- 2.How to Contact ROBERA
 - Email: support@roberashop.com
 - Follow Our Facebook
 - You can also purchase accessories and replacements at www.roberashop.com.