

# User Manual

# FOUR MODE

Manual

Follow Me Mode


**APP Control Mode** 

Remote Control Mode


# Catalogue

1. Packing List01
2. Functional diagram02
3. Installation03
4. How to use ?04
5. Functions05
6. Modes06
7. Download " icango " APP
8. APP & Setting
9. Parameters10
10. Warrenty11


# 1. Packing List

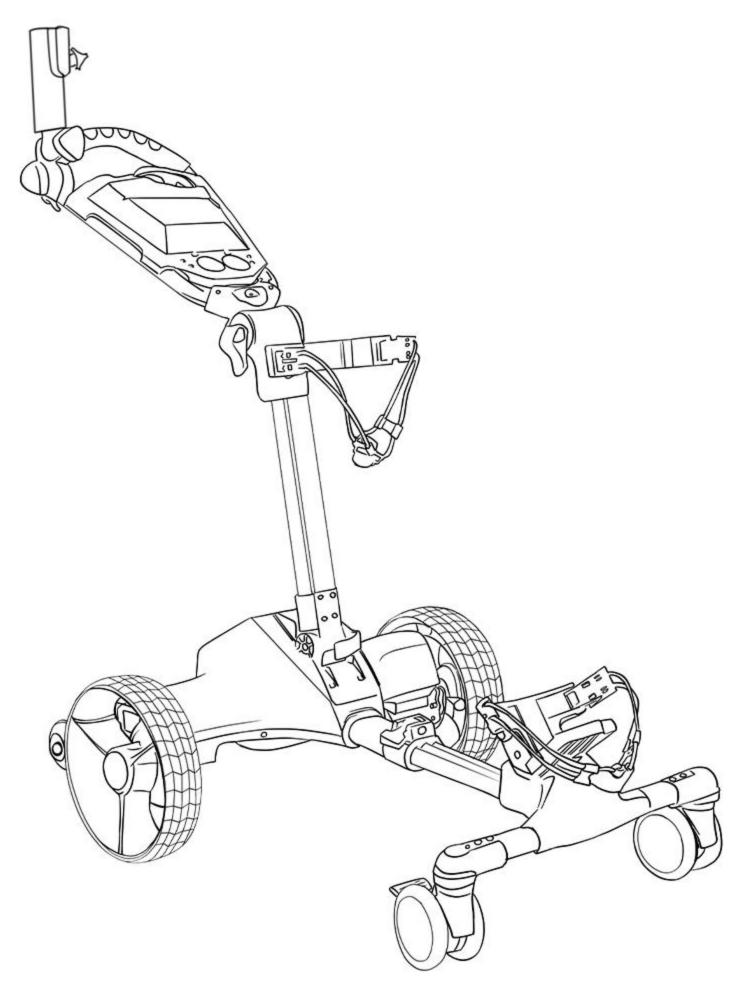


1. Trolley ×1

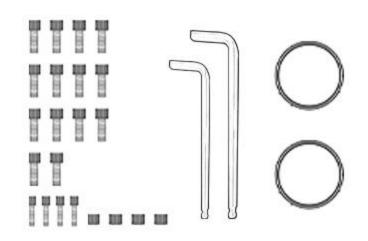

5. Toolkit ×1

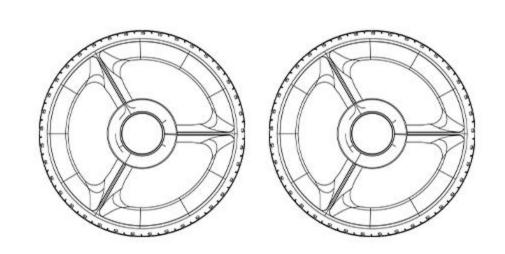


7. Mainwheel ×2

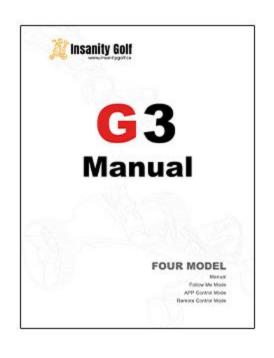


2. User Manual ×1




3. Remote ×1

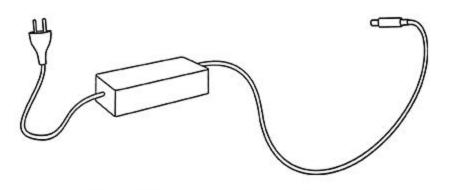


4. Charger ×1

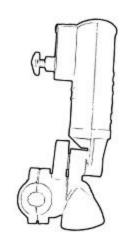

6. Umbrella Holder ×1

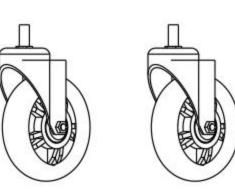


8. Front Universal Wheel ×2

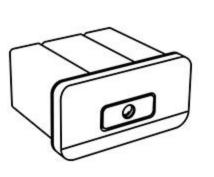


9. Battery ×1


# 2. Functional Diagram

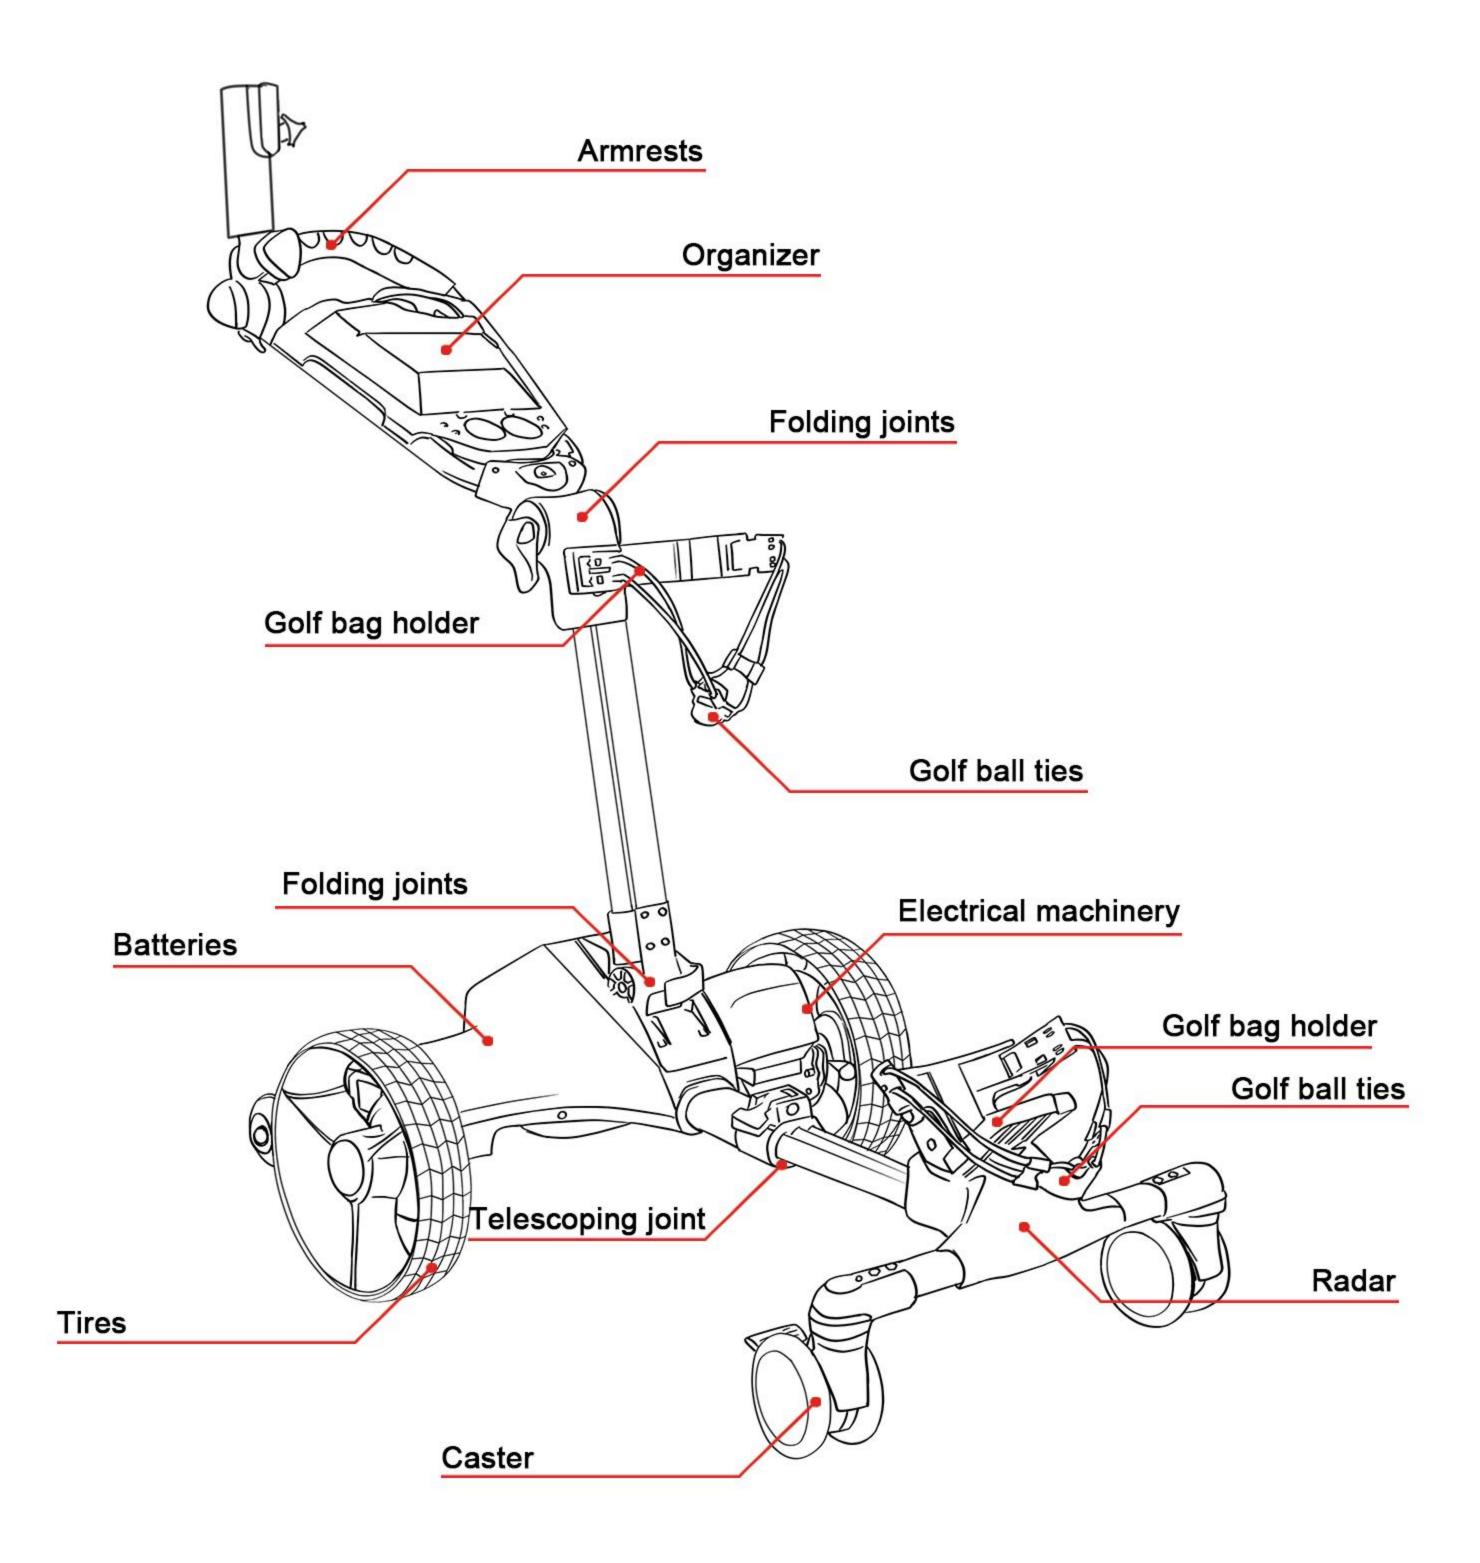

#### 3. Installation

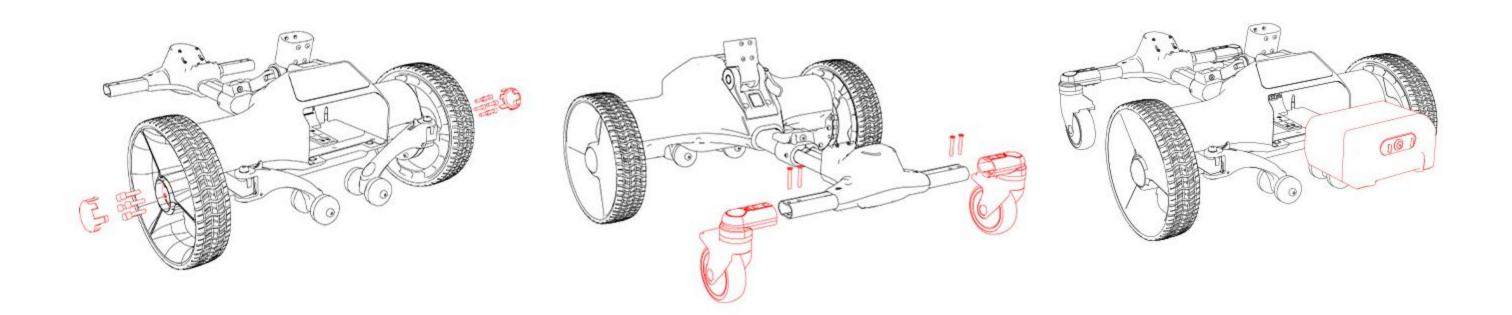

- 1. Use 12 M6\*25 mm screws to fix main wheels with motors, then put the covers on
- 2. Install 4 M5\*35mm hexagon socket bolts in the corresponding holes and add cap nuts
- 3. Insert the battery into battery housing

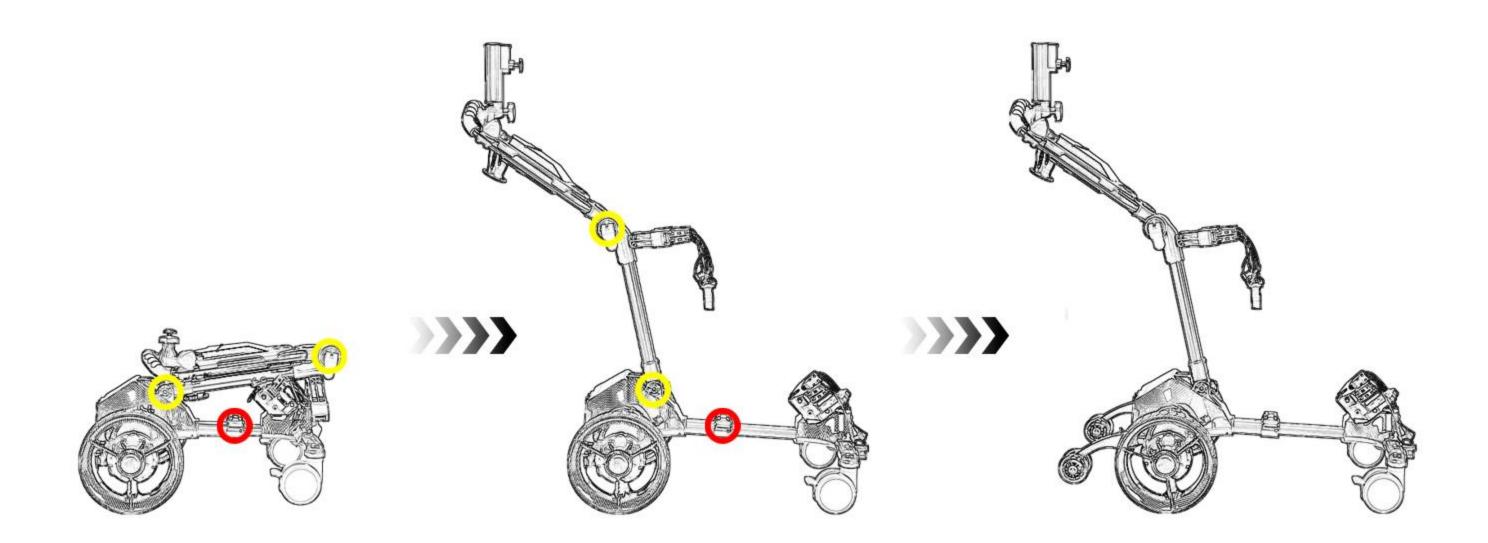



- 4. Fix the yellow circle and adjust the red circle joint to the appropriate length
- 5. When climbing a slope, please turn on the rear wheel

#### 4. How To Use


#### **After the installation**

1. Turn on the battery switch, when the LED display on, G3 is worked and stay at manual mode

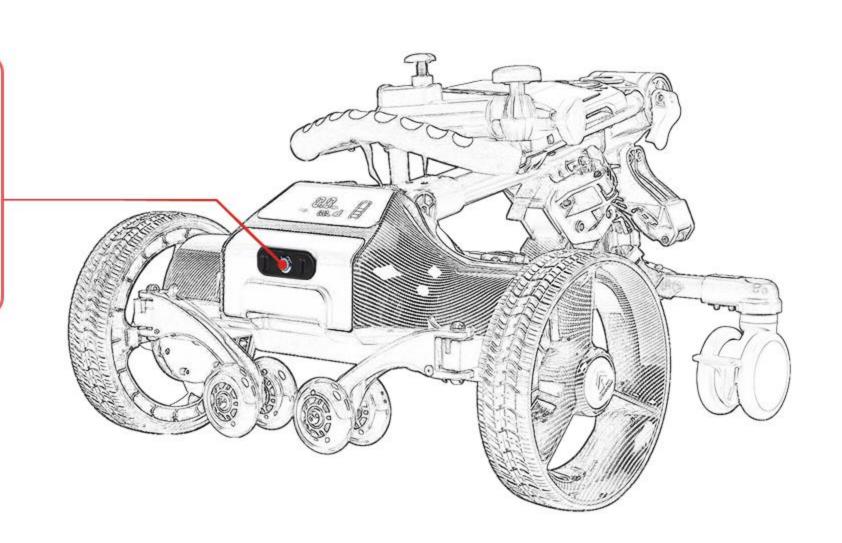


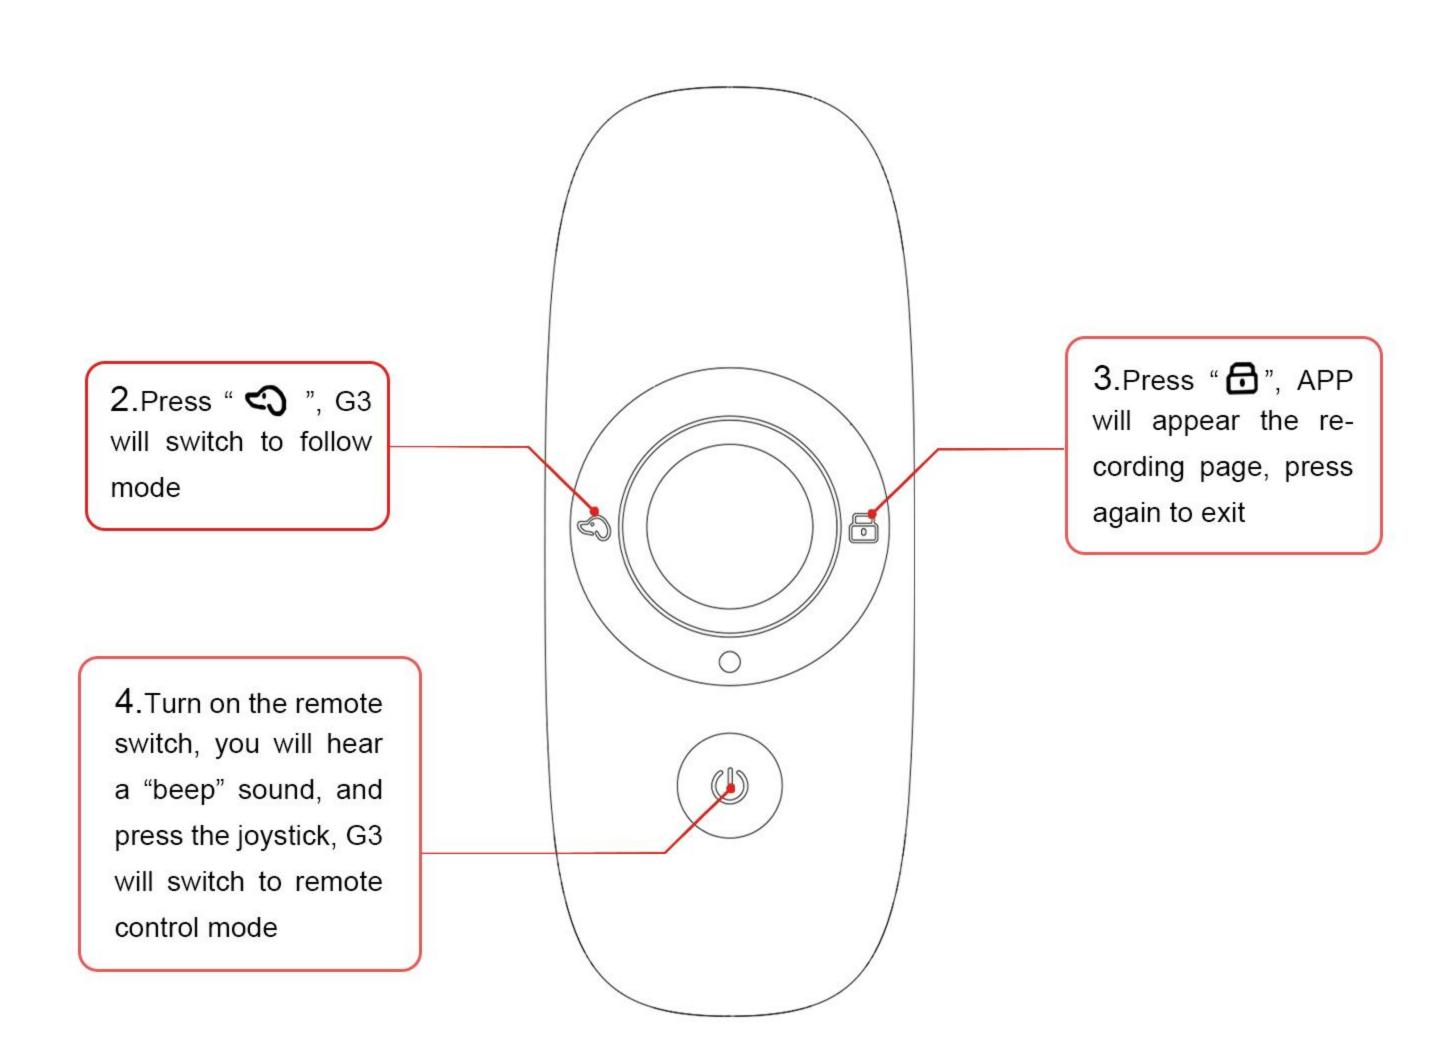


#### 5. Functions

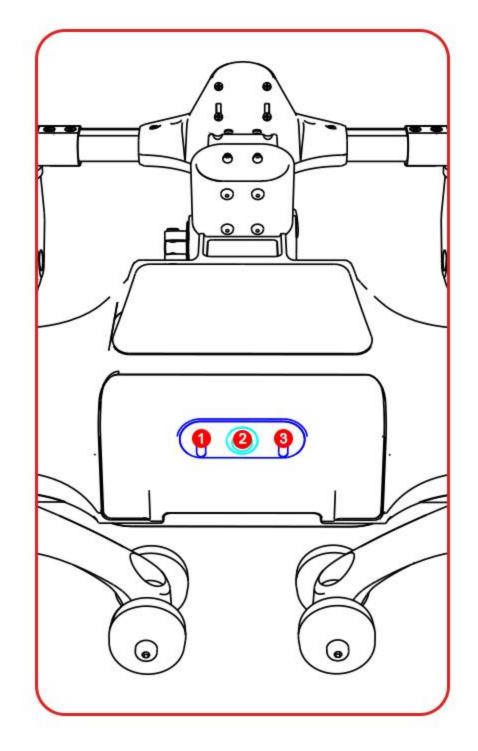

- 1. Battery Charging Port
- 2. Battery Switch
- 3. USB Port

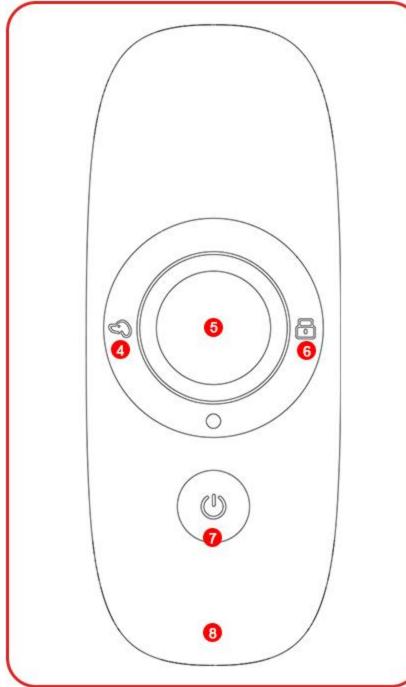

- 4. Follow Me Button
- 5. Joystick
- 6. Recording Button
- 7. Indicator Lights
- 8. Remote Switch

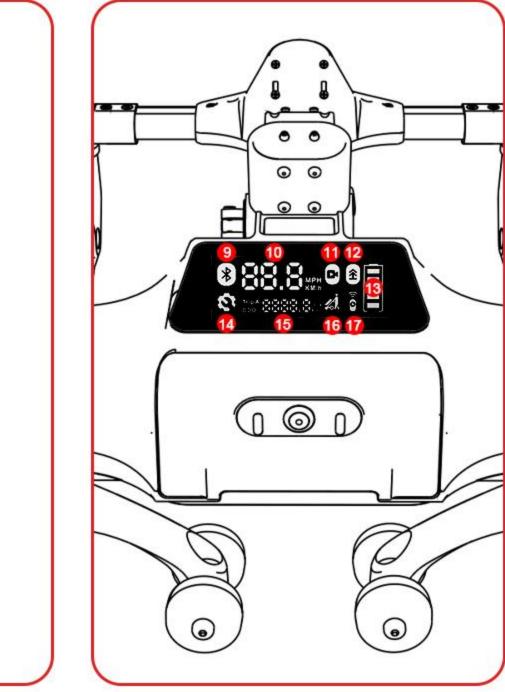

- 9. Bluetooth
- 10. Speed Display
- 11. Recording
- 12. Follow Mode
- 13. Battery Display
- 14. Fault
- 15. Total Mileage
- 16. Manual Mode
- 17. Remote Control Mode

#### 6. Modes



Manual:

- a. Under the switch off state;
- b. when G3 is first turned on;
- c. Other non-remote control state.

Notice: Under manual mode, trolley needs to be manually locked on the slope to prevent from rolling away.




Remote Control Mode:

Turn on battery and remote switch, press the joystick once. If the trolley moved, then it is under remote control mode.



APP Control Mode:

Open "icango" and connect with bluetooth. Turn to the remote page, you can use APP to control G3 with the joystick.

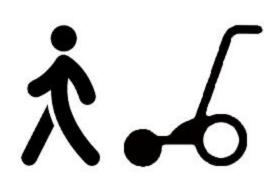

Follow Me Mode:

Turn on the battery and remote switch, press " ?" in the LED on, G3 turns to follow me mode. Push the joystick " 1 / 2 " can disable.





# 7. Scan the QR code to download "icango" APP





(Android / IOS)

## 8. APP & Setting

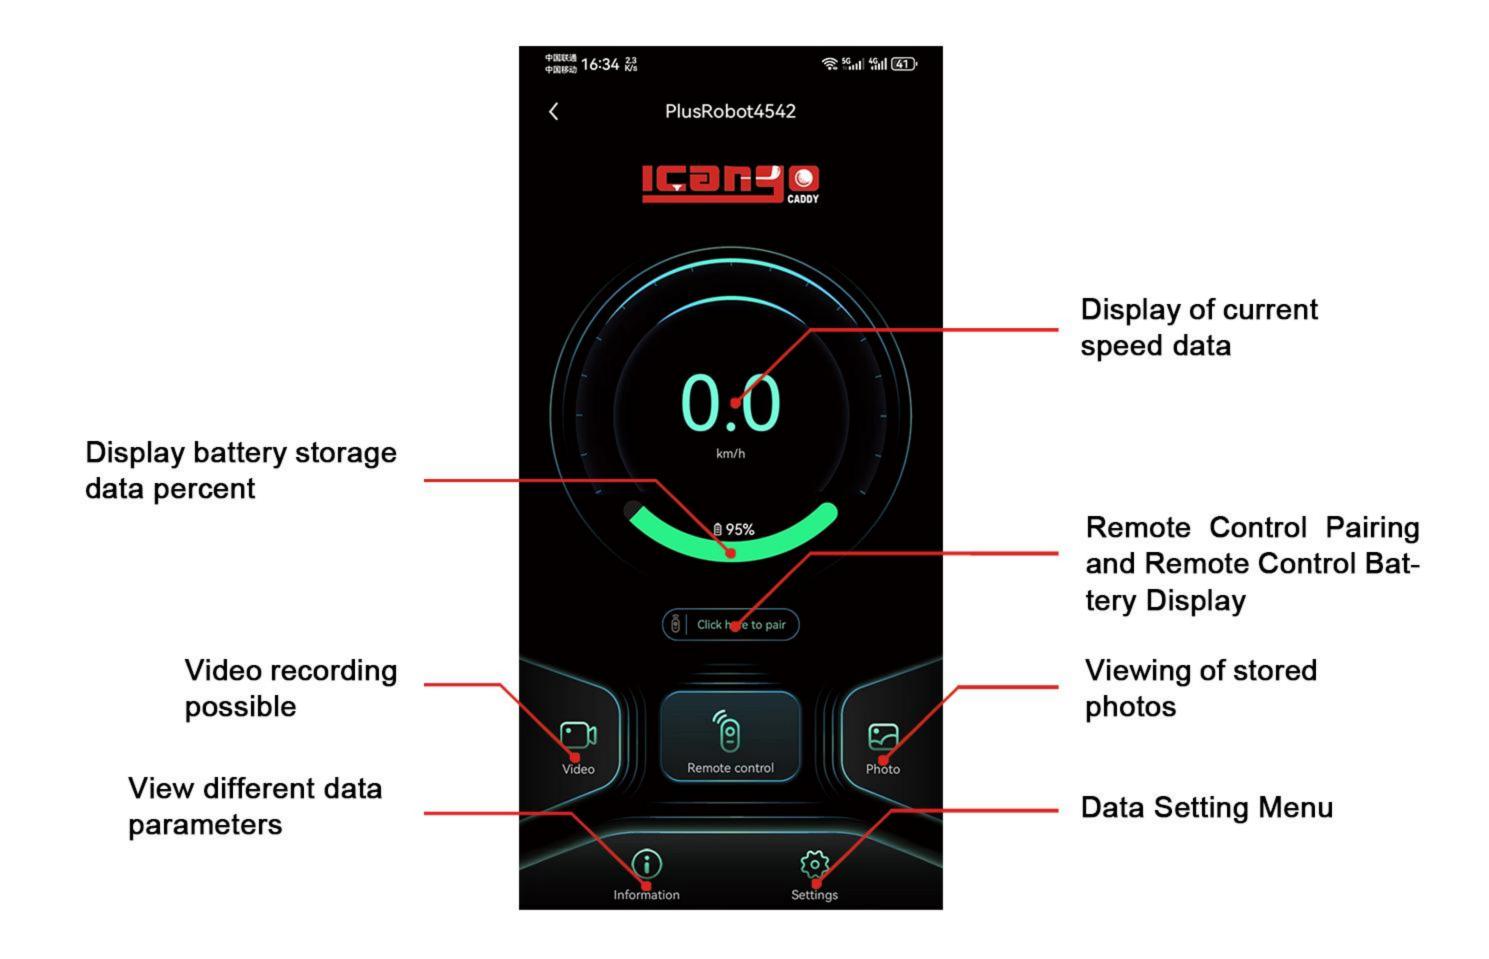

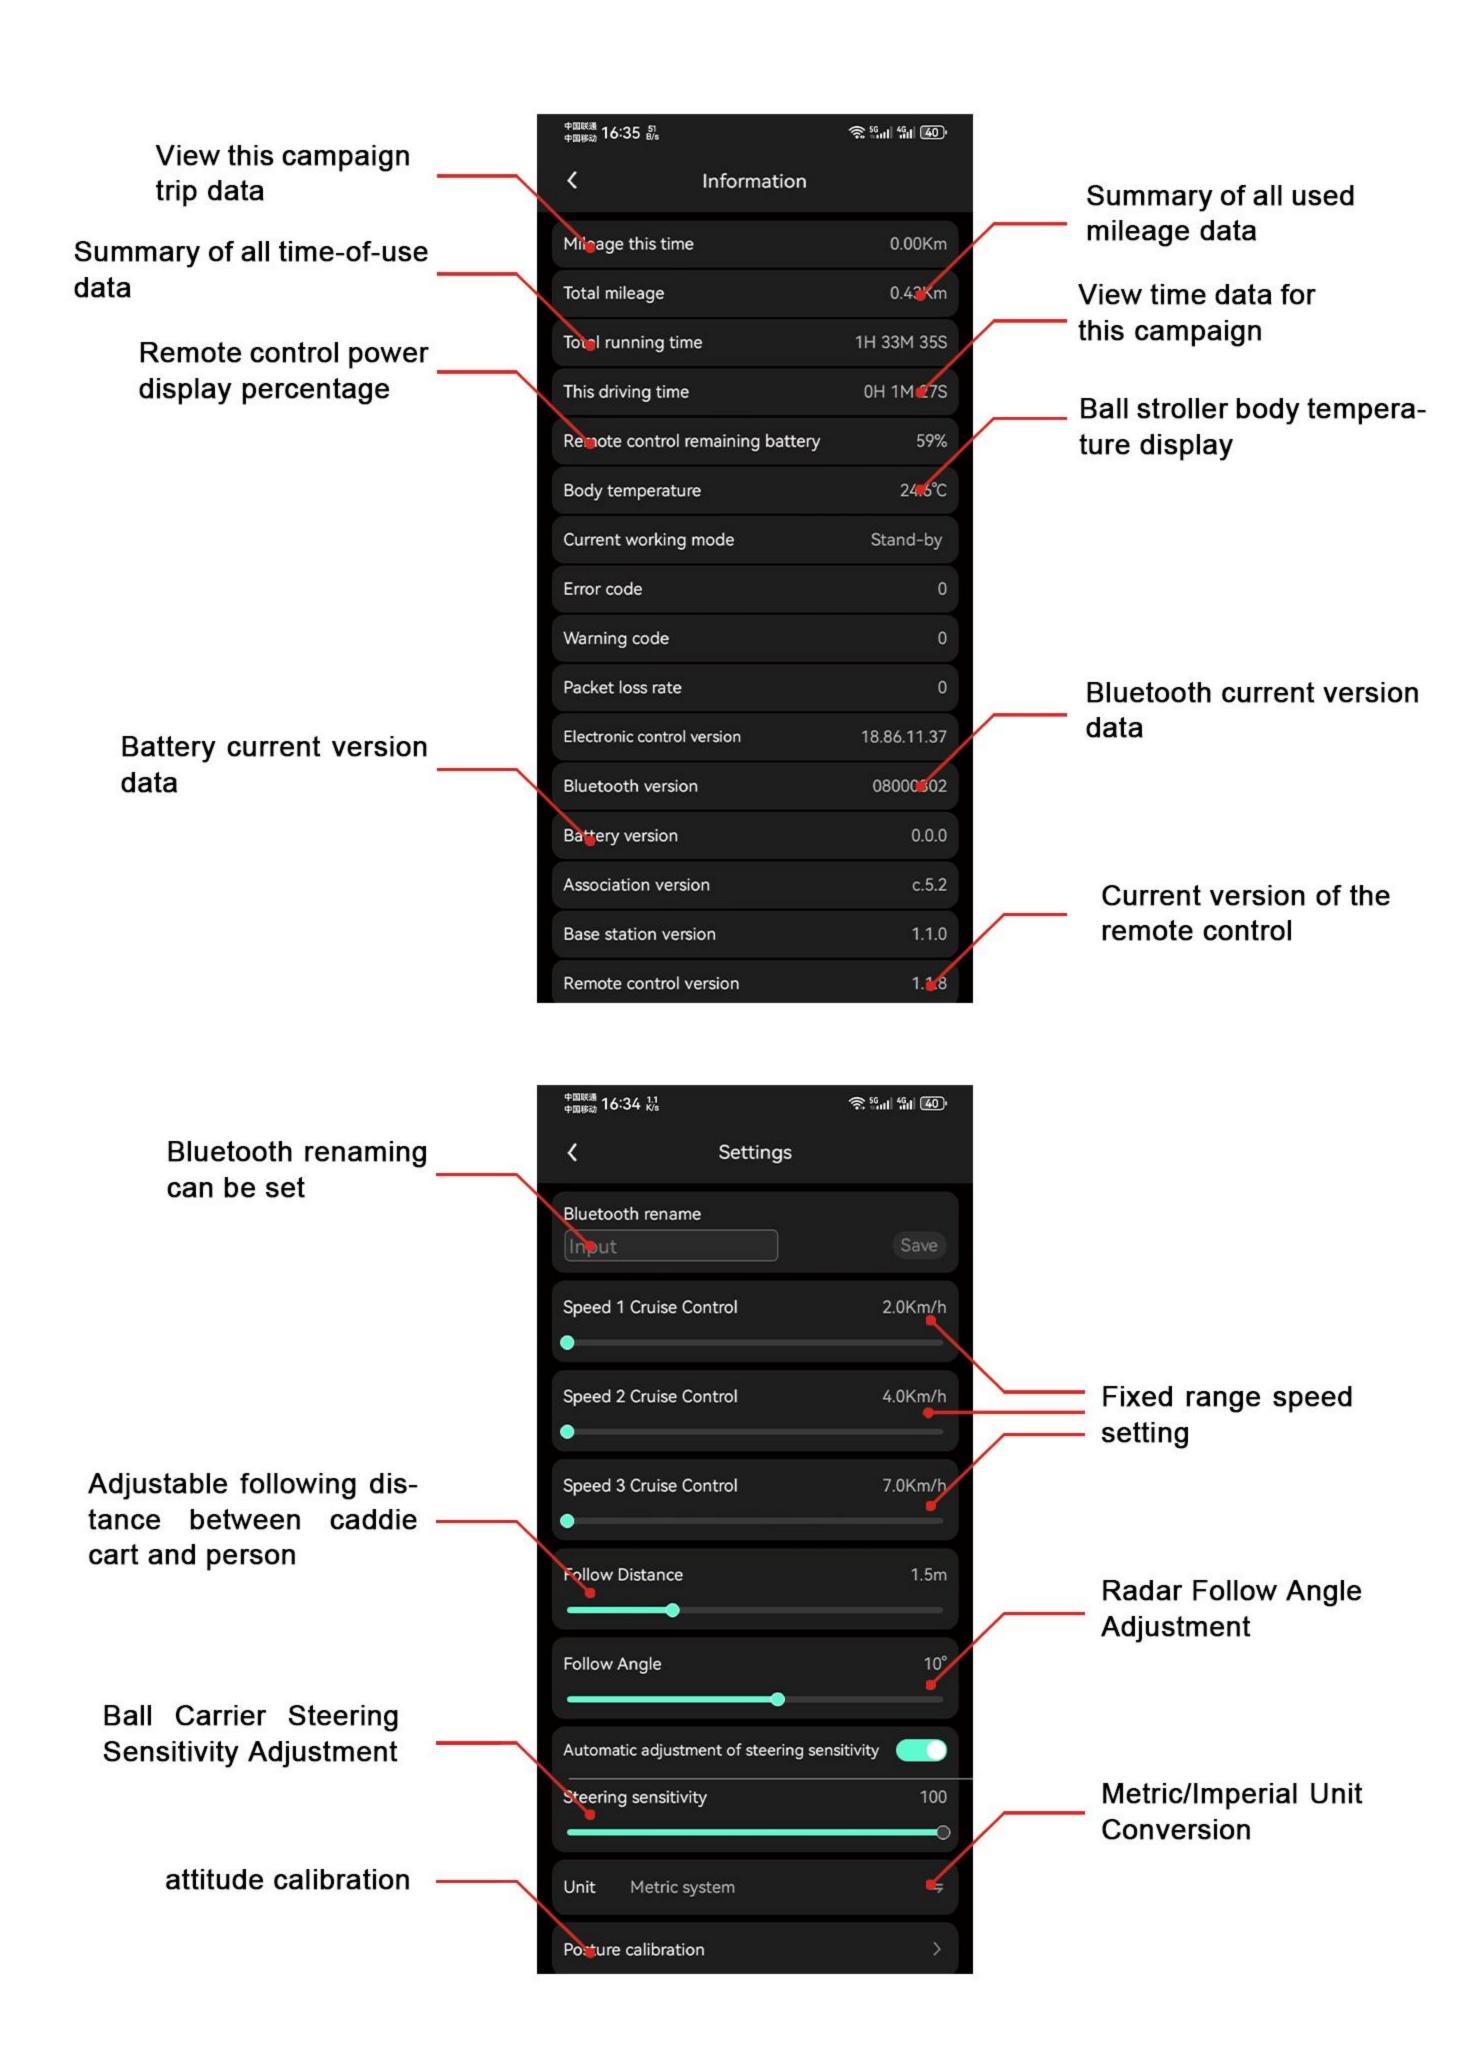

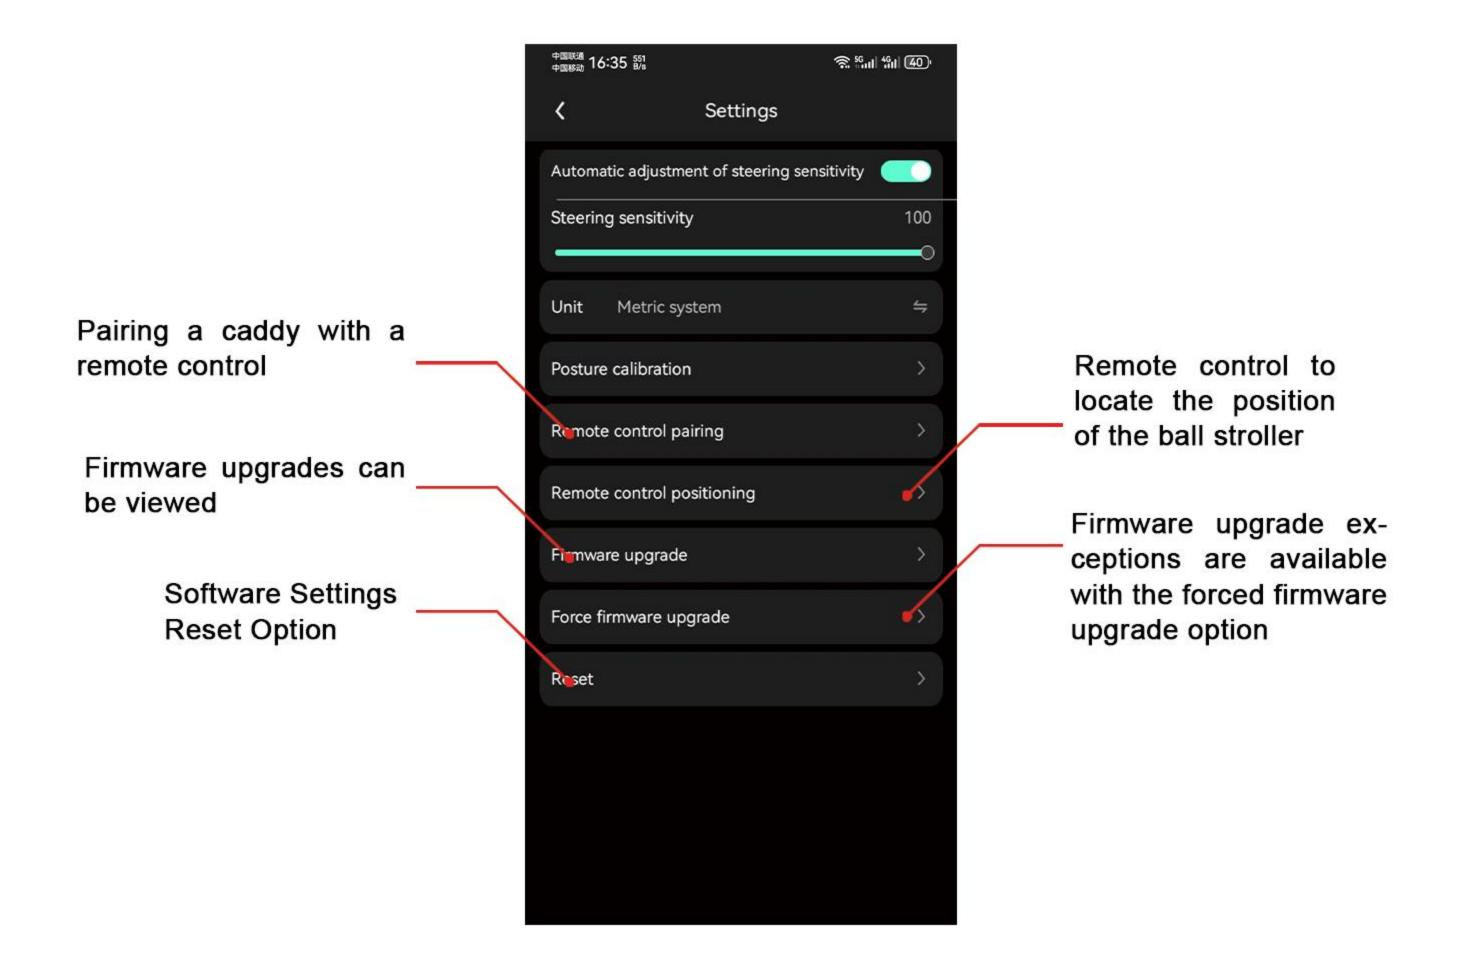

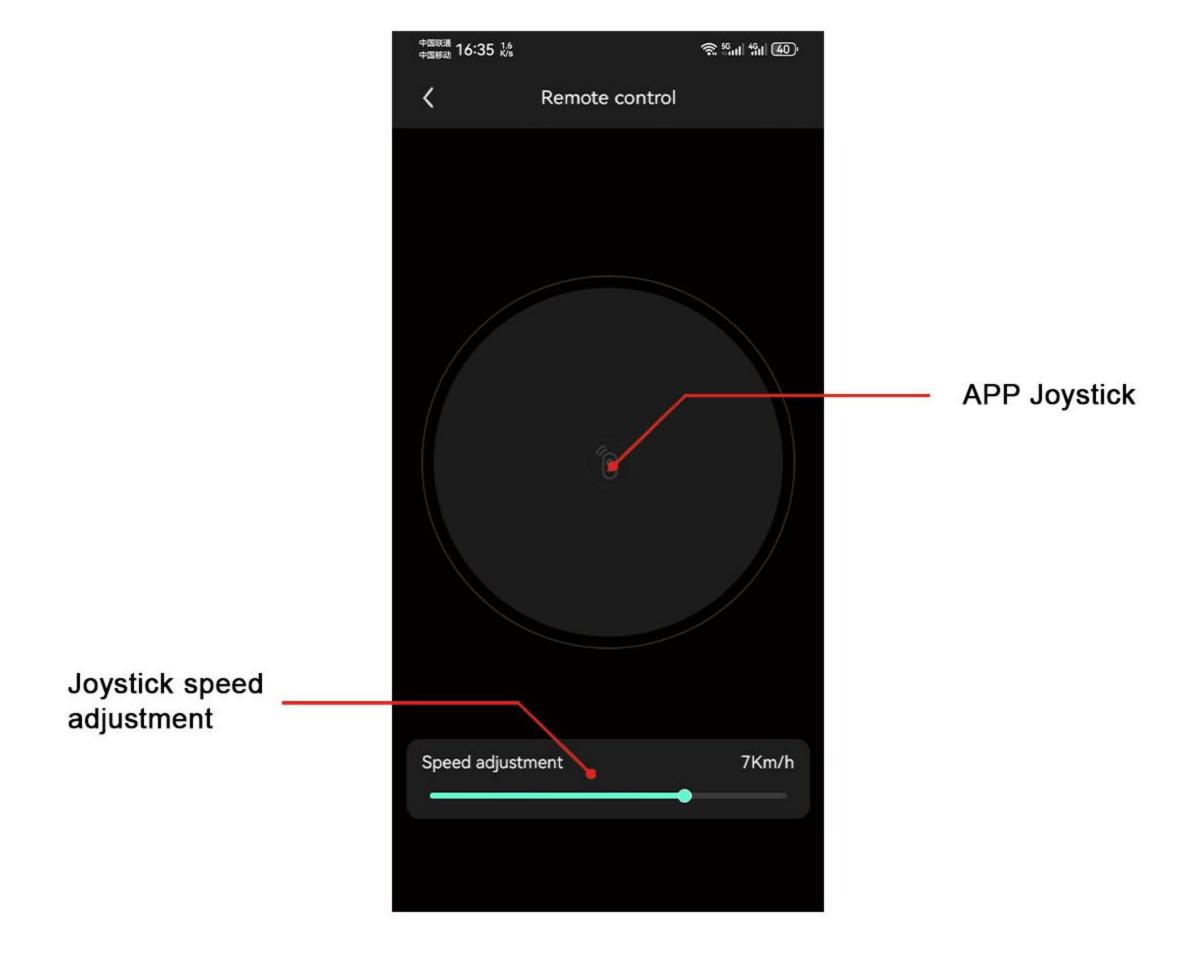

# 9. Parameters

Produt Name:	Electric Golf Trolley
Folded Size:	24.4 x 24.7 x 13.4 Inches
Expanded Size:	35 x 24.7 x 42.9 Inches
Package Size:	26.7 x 26.7 x 14.9 Inches
Cart Weight:	16.5 KG
Battery Weight:	2 KG
Battery Capacity:	25.2V, 12.8Ah
Package Weight:	20.5 KG
Body Frame Material:	Lightweight Aircraft-Grade Aluminum
Mode:	Smart Follow, Remote Control, Manual Push
Smart Control System:	Auto Brake, Auto Balancing, Auto Slope
Mobile APP:	Android / IOS
Battery Type:	Rechargeable Lithium-ion Battery
Battery Life:	28 Miles
Remote Distance:	65.6 ft (Open Space)
	<del>-</del>

## 10. Warrenty

G3 trolley and charger are covered by a 12 month warrenty from the date of purchase. The warrenty covers manufacturing defects that occur during normal use and only applies to new G3 trolley. Any brakeage caused by accidental damage, or as a result of

abuse or misuse, are not covered by the warranty. The warrenty is not transferable. Used

trolley is not subject to any warranty unless specifically stated by ourselves.

Trolley battery is covered by a 12 month warrenty. If the battery fails in the first 12 months, it will be replaced free of charge. All accessories are covered for 12 months from the date of purchase.

If you required services covered by the warrenty, please contact us. Please retain your sales receipt or packing slip for proof of purchase. The aftersale department will diagnose the problem and sen the replacement part to customer. Any parts replaced under the warrenty, at no charge, do not carry a new warranty.

In the event, the customer is unable to replace the part themselves, please retain all the original packaging material to return your trolley to repair. All trolleys must be returned in the original packaging. In the event, a replacement part is needed, but not covered by the warrenty. The customer will be responsible for all costs.

#### **A WARNING:**

G3 is water-resistant and safe to use under a light rain condition. However, trolley is not waterproof. The battery and circle board will die if it goes into a water hazard such as a pond or lake. This is not covered under the warranty plan.

#### Precautions for use:

- 1. Hanging heavy items on handle is not allowed while using trolley;
- 2. If encounter insurmountable obstacles while using, please move the trolley away;
- 3. When walking on a steep slope, manual assistance is needed to push and pull at the necessary moment.
- 4. If you do not use the trolley in winter, please remove the battery and store it in an environment above 10°C to increase battery life.